




## User's manual



Titan

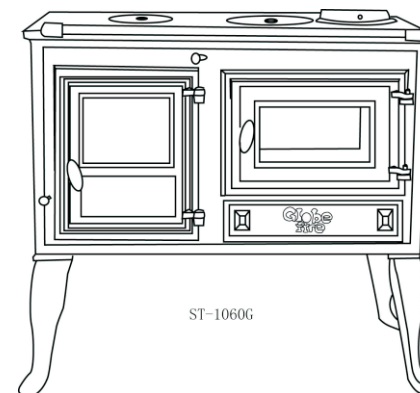

Ch. Leibfried GmbH  
An der Bundesstraße 2 49733 Haren/Ems  
Germany  
Tel: +49(0)5932-7334784  
[info@globe-fire.de](mailto:info@globe-fire.de)

# - Globe fire -

Globefire Ch.Leibfried GmbH, An der Bundesstraße 2,  
D-49733 Haren / Ems, Germany

## Tested stove type 1: EN 12815

Type	Titan ST 1060		
Capacity	6 - 8 kW		
Tested capacity	7 kW		
Fuel	Wood & Coal		
Test-Nr.	RRF - 15071505		
VKF Switzerland	25279		
Dust in Mg on 13% O <sub>2</sub> : 31 mg/Nm <sup>3</sup>	Nox: 170 mg/Nm <sup>3</sup>	CO: 1000 mg/Nm <sup>3</sup>	OGC: 75 mg/Nm <sup>3</sup>
Values ( converted ): 19 mg/MJ	107 mg/MJ	625 mg/MJ	47 mg/MJ

Efficiency: 76 %

Minimal distance to flammable materials	Side:	20	cm
	Rear:	20	cm
	Front stove window:	80	cm

Test institute Number: 1625

Reading and follow up of given guidelines in the manual

The connection of more stoves to one chimney is permitted




**Approved German tests and CE mark:** gem. Art. 15a B-VG kleine ,Ö-Norm,  
Tests of the city of München, Regensburg, Stuttgart and Aken DIN plus,  
and also Luftreinhalte Verordnung Switzerland, 1. + 2. BimschV.


# Globe Fire recommendations

## Lighting the fire:

Open the primary / secondary air vent.  
Check to see if an eventual air vent or  
pipe in your burner is open.

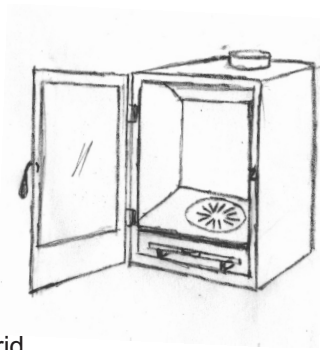


1. Open the fire/grid.



2. Place two large logs (10 cm thick) on the  
fire grid completely covering the grid.  
Use a round log or chopped wood.



3. Place a firelighter in the middle.

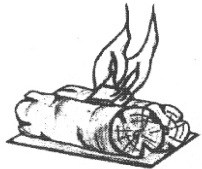

4. Light the firelighter.



5. When the firelighter starts to burn place two  
large logs (10 cm) in the flames.  
Close the door.

When the stove is hot (approx. 15 - 30 minutes)  
close the grid.

Add further wood using 1, 2, or 3 logs. Make sure  
the wood has a real glow of flames before doing  
this. (to prevent smoke in the room)

## Congratulations with your new Globe Fire stove

Cast iron stoves have a long tradition. Our business is in its  
5th generation of development and production of stoves,  
insert fires and cookers.

Our models are all made of a high quality cast iron using  
advanced technology enabling you to burn your fire for long  
periods.

Please read the User's manual carefully and follow all  
instructions given.

We wish you a cosy warmth and much pleasure with  
our product in the years to come.

Your **Globe-fire** team.

# Safety regulations

The user must consult the user's manual for instructions on operating and using the cooker.

The cooker has been tested according to German regulations and has acquired the Bauart 1 test.  
This offers the possibility of connecting more than one burner to a single chimney.  
The chimney sweeper should be consulted about this.

When the cooker is in use the door must be closed.  
The fire can be regulated by the revolving grid and the primary / secondary air regulator.  
Do not close the primary / secondary air regulator before the wood has burnt to a glow and the flames are no longer visible.


In houses where air supply (necessary for the fire to burn) is taken from the room, there should be a sufficient supply of fresh air.

The ash door should always remain closed when the fire is burning.  
If the door is left open an uncontrollable amount of air is added to the fire which may prove dangerous as the cooker can become overheated.  
Parts that are in contact with the fire could buckle or even break.

When the cooker is not used for a longer period of time, close the revolving grid and the primary / secondary regulator.  
This is to ensure that any ash or smell of burning does not enter the house.

**WARNING: CHILDREN PLAYING !!!**  
**A stove becomes very hot when it is burning !!!**

# PARTS

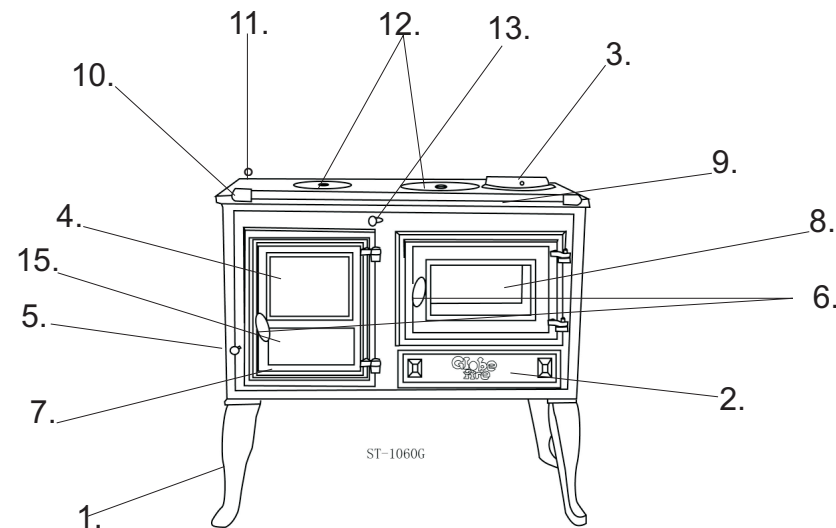

Titan

- |                         |                                   |
|-------------------------|-----------------------------------|
| 1. Leg of cooker        | 8. Oven window                    |
| 2. Cleaning cover       | 9. Stove bars                     |
| 3. Flue connection pipe | 10. Stove bar holders             |
| 4. Cooker window        | 11. Primary / Secondary regulator |
| 5. Fire / rotating grid | 12. Ring plates                   |
| 6. Door handle          | 13. Oven regulator                |
| 7. Ash pan              | 14. External air flow (rear)      |
|                         | 15. Cinder guard                  |

# **Installation and operation manual for Stove model ST-1060g** **Tested according to German standards: DIN EN 12815, Ö-Standard** **15A and 1.+2. BimschvV., CE and Luftreinhalte-Verordnung Switzerland**

## **1. INSTALLATION OF COOKER.**


The cooker is ready for use and can be connected to the chimney with the flue pipe. If possible, connect the flue pipe, keeping it short, straight or slightly at an angle to the chimney.

Seal the connection (heat resisting fire rope).  
 When fitting the legs do not drag or push the stove but lift it (the legs could break off).  
 Connect the external air flow by using a pipe.

National or European standards, including local standards and any fire regulations must be complied with.  
 Ensure that there is sufficient air flow before burning wood.  
 This is particularly important in well insulated houses and those with a mechanical ventilation system.

To ensure your chimney has the correct measurements it is possible to measure it. Ask your chimney sweeper for advice.

Before placing the cooker into position check to see if the floor can take the weight.  
 When in doubt place the stove on a large slab of stone or marble to divide the weight.

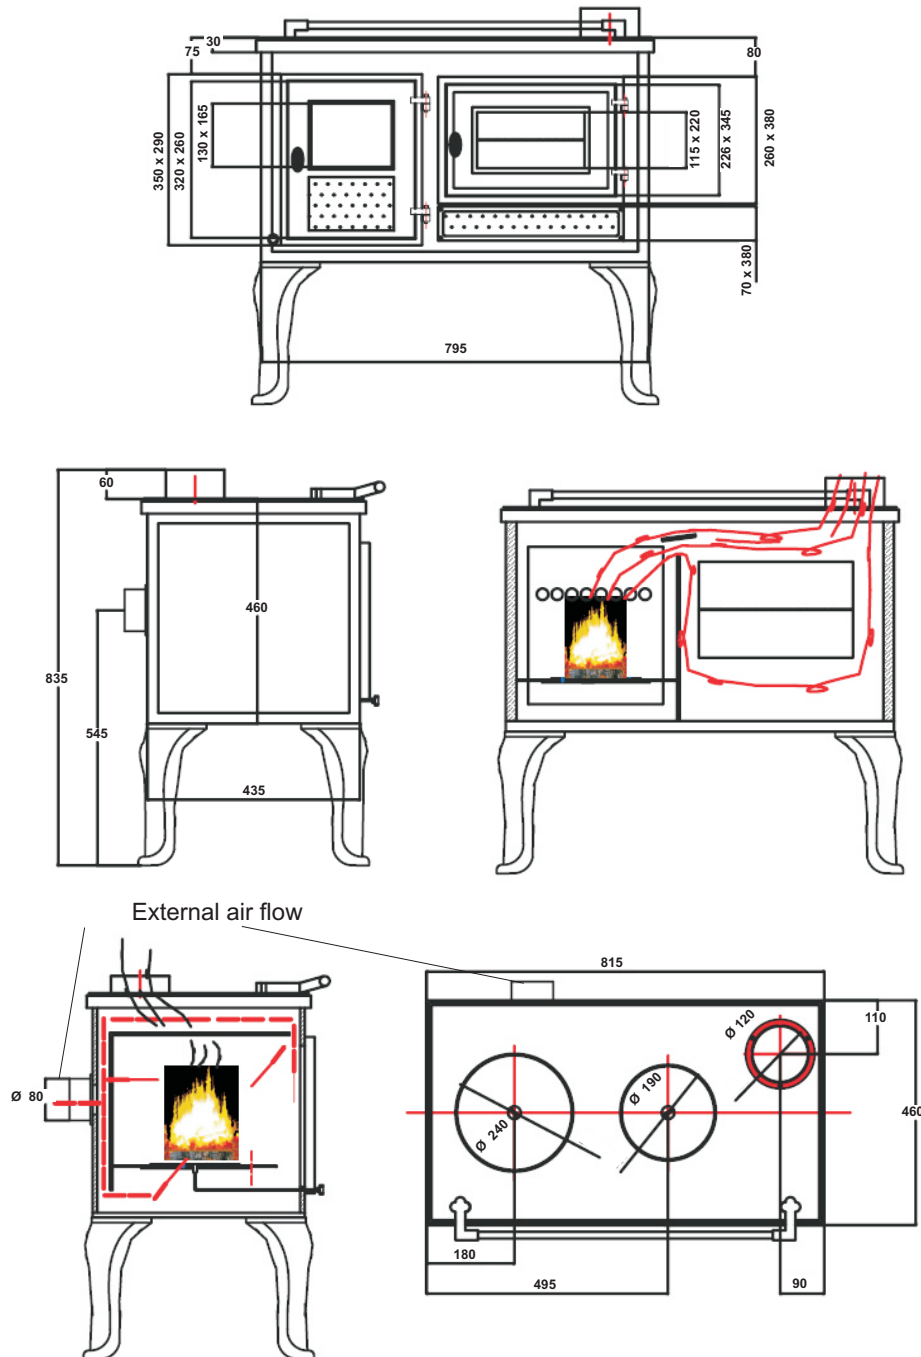

## **2. GENERAL FIRE SAFETY INSTRUCTIONS.**

During wood burning, high temperatures are reached make it impossible to touch the top, sides or door without using heat resisting gloves.

Children must be made aware of the dangers and kept away for the cooker when lit.

### 3. TYPES OF FUEL PERMITTED.

Use blocks of wood approx. 30 cm in length and 10 cm in diameter.  
Certain types of coal can also be used, with the exception of black coal and anthracite which is not recommended because of overheating causing the cast iron to warp or break.

Wood must be dry. (max. 20% moisture content)  
Burning synthetic materials, plastic, varnished wood or other materials is strictly forbidden by law because of emission of harmful gasses endangering health.  
The chimney and cooker will become severely damaged and the smell produced is a hindrance for the neighbourhood.

Unlike gas or oil, wood cannot burn overnight.

### 4. OPERATION OF THE COOKER.

Lighting the cooker for the first time will cause an unpleasant smell and blue damp. Leaving a window open while the paint is hardening is recommended.  
Make sure the fire burns well so that the paint hardening process is successful. Once this is done no more trouble with smell and damp will occur.  
Never use methylated spirits, petrol or other fluids to light the stove, this can be very dangerous.  
Using a firelighter is recommended.  
The wood used must not be younger than 2 years and no older than 6 years.  
Young wood is too wet and will produce too much soot. Old wood is not suitable to start a fire as it no longer contains any gasses, preventing the right temperature being reached quickly for a fast and clean burning.

With the technique we use, the fire will burn at its best within 15 to 20 min.  
Before starting the fire, check to see that all air vents are open.  
When the fire is burning well the fire grid can be closed and the flames regulated with the primary / secondary regulator.  
Do not close up completely while flames are visible. (This is to avoid smoke entering the room)  
Stay with the cooker until burning well.  
If the fire has been started well the stove should remain quite clean.  
Wait until the wood has burnt to a glow before putting on more logs

### 5. GLOBE FIRE RECOMMENDATIONS “ LIGHTING THE FIRE “ ON PAGE 12.

### 6. AIR SUPPLY.

Always make sure there is enough air in the room.

FAULTS	CAUSES	SOLUTIONS
The cooker developssmoke on the top plate and smells.	1 This only occurs when the paint is hardening. (lighting for the first time)	1 Let fire burn well and make sure of fresh air. Open all doors and windows.
The cooker has not enough chimney draught when lighting the fire. Fire will not burn.	2 Air vent is closed. 3 Chimney vent is closed. 4 Wood is too wet. 5 Wood is too old. 6 Not enough wood. 7 Wood is too small. 8 External air pipe is too close to the wall. 9 Unfavourable weather. (heavy mist) 10 No chimney draught. 11 Chimney is dirty or has an air lock.	2 Open air vent. 3 Open air vent. 4 } Only use seasoned wood 5 } between 2 and 6 years old. 6 } See page 12. 7 } 8 Move cooker forwards. 9 Occurs seldom. See point 10 / 11. 10 } Ask chimney sweeper. 11 }
When adding wood smoke enters the room.	12 Refilled too soon. 13 Air supply closed too soon 14 Stove pipe full of soot or ash. 15 No chimney draught.	12 Only refill when fire has burnt to a glow. 13 Open air vent. 14 Clean cooker pipe. 15 Phone chimney sweeper.
Soot forms constantly on cooker glass.	16 Fire not hot enough when building up fire. 17 Air supply closed off too soon. 18 Wood too old or wet.	16 See page 12. 17 Open air vent. 18 Only use seasoned wood between 2 and 6 years old.
Room smells of burnt wood and cooled ash.	19 Added new wood too soon.	19 Only add more wood after first wood has burnt to a glow.

15. CAPACITY.

Capacity, depending on the building material used for your house and tested according to European and German requirements:

Favourable conditions	-	165 m <sup>3</sup>
Average conditions	-	95 m <sup>3</sup>
Unfavourable conditions	-	65 m <sup>3</sup>

**GUARANTEE**

30 months guarantee.  
This guarantee is only valid under normal use of the fire and for the operation of the cooker. It does not cover overheating, scratches, parts that normally wear out or any part in direct contact with the fire. (glass, fire grid, sealing, etc.)  
The guarantee does not cover insufficient servicing of the cooker or use of any parts other than parts from **Globe-fire**. Before operating the fire, the user is expected to read the user's manual and the guarantee.  
After use the stove cannot be returned.  
After repairs the guarantee expires and cannot be renewed.

7. USING THE FIRE IN THE AUTUMN AND SPRING.

In these seasons of the year when the outside temperature is higher your chimney may not have a good chimney draught and the smoke will not be sucked out enough. In this case it is recommended to use a lot of dry wood (three quarters full) not older than 6 years.  
By lighting the fire for the first time, also when the temperature is not so high, follow the Globe fire recommendations “ lighting the fire “!

8. CARE AND MAINTENANCE.

The cooker must be cleaned yearly and occasionally even more often.  
It is recommended that the chimney is swept every year by a professional chimney sweeper.  
The **Globe-fire** cookers have been treated with a heat resisting paint., After this has hardened, the cooker can be cleaned with a damp cloth, using a dry cloth to dry off afterwards.  
The cooker window can be cleaned with a glass cleaner.  
Badly stained glass can be cleaned with a special gel or oven cleaner.  
Never clean the cooker when it is hot.  
Remove the ash between the fire grid so that the grid will revolve easily.

## 9. COOKER WITH SELF CLOSING DOOR.

As our stoves and cookers have self-closing doors (fitted with a resisting spring) it is possible to have more stoves connected to the same chimney. All stoves must be fitted with a self-closing door. To make sure this connection is possible please contact a chimney sweeper. The fire must not be lit with an open door. If the other stoves do not have a self-closing door or they are open fires it is not possible to connect more stoves to one chimney. In this case the chimney draught is not correct and the room could fill with smoke.

## 10. FRESH AIR FLOW FOR MAXIMUM COMBUSTION.

If your house is fitted with a mechanical ventilation system it is necessary to use an external air flow which can be fitted on to the rear of the cooker. Problems can also occur if an extractor hood with a high extraction capacity is fitted in your kitchen and the house is well insulated. Too much air will be taken out of the room causing smoke to be extracted from the cooker. This can be solved by placing an automatic switch in your extractor hood which only works with a window open. These can be supplied by your electrician.

## 11. ACTION TO BE TAKEN BY A CHIMNEY FIRE.

Using wet wood, burning at low temperatures or using the wrong sorts of fuel can cause a deposit of soot in the chimney. This can result in a chimney fire. In this case close all air vents and contact the fire brigade. After the fire, get your chimney sweeper to check for any cracks that may have occurred and sweep the chimney.

## 12. FIRE SAFETY DISTANCES.

### Furniture and flammable wall.

The distance from the back of the cooker is 20 cm.  
From both sides 60 cm.  
From the glass 80 - 100 cm.

### Floor.

A flammable floor ( carpet, wood etc. ) must be protected by a fireproof plate that is 30 cm wider on both sides and at least 50 cm in front.  
Each type of stove may have different regulations.  
The distances required for your cooker are found by consulting the page on types of cookers in your user's manual.

## 13. PARTS.

It is only possible to replace parts with original parts belonging to the cooker. These parts can be ordered through your supplier.  
The fireplace must under no circumstances be altered in any way.

## 14. CAPACITY.

This cooker has been tested at 7 kW.  
When adding fuel it is recommended not to use more than 3 blocks of wood.  
When using brown coal use only 3 or 4 briquettes.

**Do not open the cooker door before the wood has burnt to a glow and flames are no longer visible !!!**